


## INSTALLATION GUIDE

1. Remove the OE derby cover and set the cover screws and washers (if applicable) aside. They will be reused.


**Note:** Some models have one derby screw that is longer than the other screws. Be sure to note the position of the screw when it is removed so it can be reinstalled in the same position.

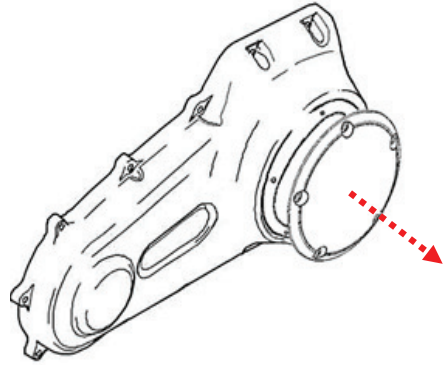

2. Remove the gasket or O-ring from the derby cover and inspect it for wear or damage. Replace if necessary.
3. Install the gasket or O-ring onto the Rekluse derby cover.

4. Install the Rekluse derby cover onto the primary cover, then reinstall the OE washers (if applicable) and cover screws in the position they were removed.

**Note:** Depending on the bike model, the derby cover may look different than pictured.

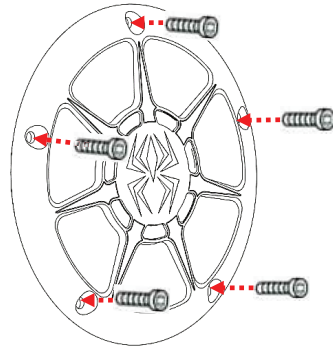

5. Lightly tighten the cover screws in small increments, then torque to **90-120 in-lbs (9.5-12.2 N-m)** per OE specifications.