



INSTALLATION GUIDE

1. Remove the OE derby cover and set the cover screws aside. They will be reused.

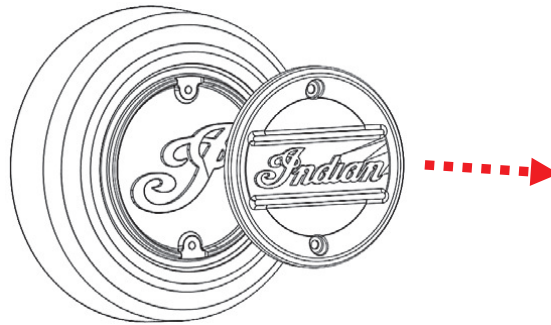

2. Install the Rekluse derby cover onto the clutch cover using the OE cover screws.

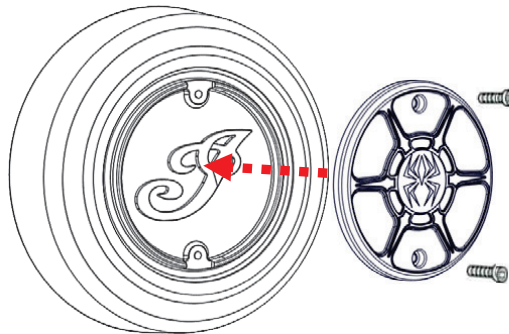

3. Apply Loctite 243 or equivalent to the screws. Lightly tighten bolts in small increments, then torque to **9 ft-lb (12 N-m)**.